



Wiring diagram for System 300 Whirlpool (WP300)
with **White** or **Blue** L.E.D Light

- Switch box - 3 function classic line (20-0243)
- Control - 3 function oval touch (25-2643-11)
- Low Level Sensor - Grey 5v (25-0211-5)

