





User instructions for System 300 whirlpool (WP300)
with **Chromotherapy** L.E.D light



- (1) Press this button to activate the pump (green L.E.D above button will light). Press again to switch off. This function will only operate if there is enough water in the bath and has a 30 minute timeout.

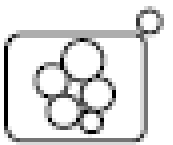

- (2) When the pump is activated (above) press this button to introduce the blower (green L.E.D above button will light). Press again to switch off. This function should only be activated when the pump (1) is running and has a 30 minute timeout.

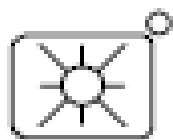

- (3) Press this button to active the L.E.D light (green L.E.D above button will light). The light will start on the continuous colour cycle (20 seconds on each colour mix until the button is pressed again). Each time the light function is pressed the light will move on to the next colour sequence. The final colour sequence has every diode illuminated. This function will operate with or without water in the bath. There is no timeout for this function.

20 minutes after the bath has drained the blower (2) will turn on automatically for 2 minutes (green L.E.D above button will light), sending air through the pipework (hygiene management). This feature will only activate if button 2 has been used while the bath was full.