






User instructions for System 500 whirlpool (WP500) with **Chromotherapy** L.E.D light

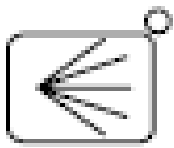


- (1) Press this button to activate the pump (green L.E.D above button will light). Press again to switch off. This function will only operate if there is enough water in the bath (green L.E.D will flash every second) and has a 30 minute timeout.

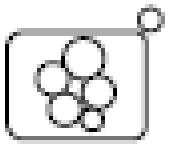

- (2) When the pump is activated (above) press this button to introduce the blower (green L.E.D above button will light). When the blower is running hold down button for 3 seconds to activate the pulsating mode (green L.E.D above button will flash). The blower will pulse from high to low continuously. Press again to switch off. This function should only be activated if the pump (1) is running and has a 30 minute timeout.

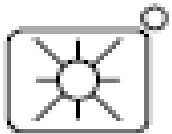

- (3) Press this button to activate the L.E.D light (green L.E.D above button will light). The light will start on the continuous colour cycle (20 seconds on each colour mix until the button is pressed again). Each time the light function is pressed the light will move on to the next colour sequence. The final colour sequence has every diode illuminated. This function will operate with or without water in the bath. There is no timeout for this function.

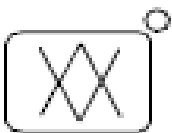

- (4) When the blower (2) is activated on normal mode (not pulsating) hold down this button to reduce / increase the blower to the required power level (green L.E.D above button will light). The blower will continue to reduce / increase in power until the button is released. The blower will continue to run at the chosen speed until function (2) is de-activated.

20 minutes after the bath has drained the blower (2) will turn on automatically for 2 minutes (green L.E.D above button will light) , 1 min from low to max, then 1 min at max speed, sending air through the pipework (hygiene management). This feature will only activate if button 2 has been used while the bath was full.